

ABACUS OPTICAL PROBE DRIVERS


This document discusses installing the ABACUS Optical Probe drivers. Online drivers and driver CDs from ABACUS Electrics no longer work in many cases, so the probes now come in a configuration that will normally use Windows Update to automatically load the necessary driver and operate normally. However, in some cases due to security restrictions on the user's computer, it may be necessary to download the drivers from FTDI. The Abacus Electrics probes use an IC from FTDI Chip (ftdichip.com). The most recent Virtual COM Port (VCP) driver that supports the underlying FT232/245BM is currently located at (subject to change):

1. Enter the FTP site


ftp://71.170.37.26/Abacus_FTDI2.12.28.zip

username: abacus


password: driver

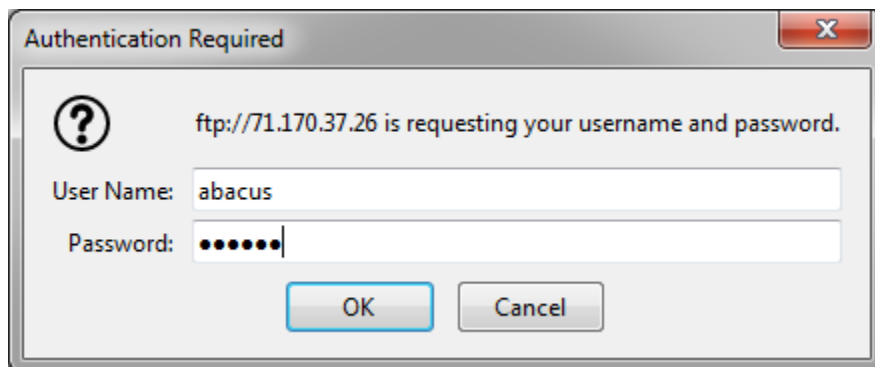

2. Save the file that appears

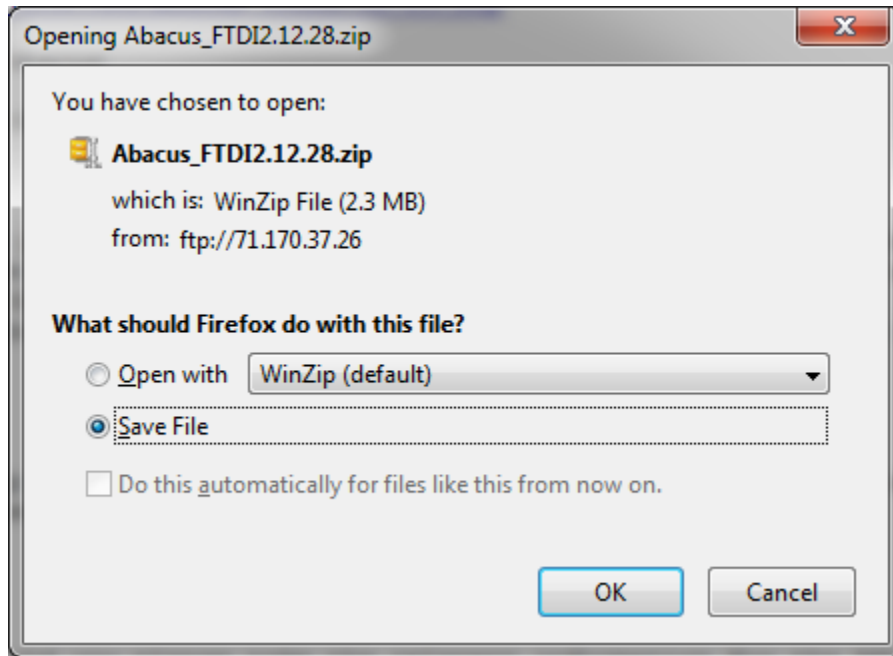


3. Unzip the downloaded file

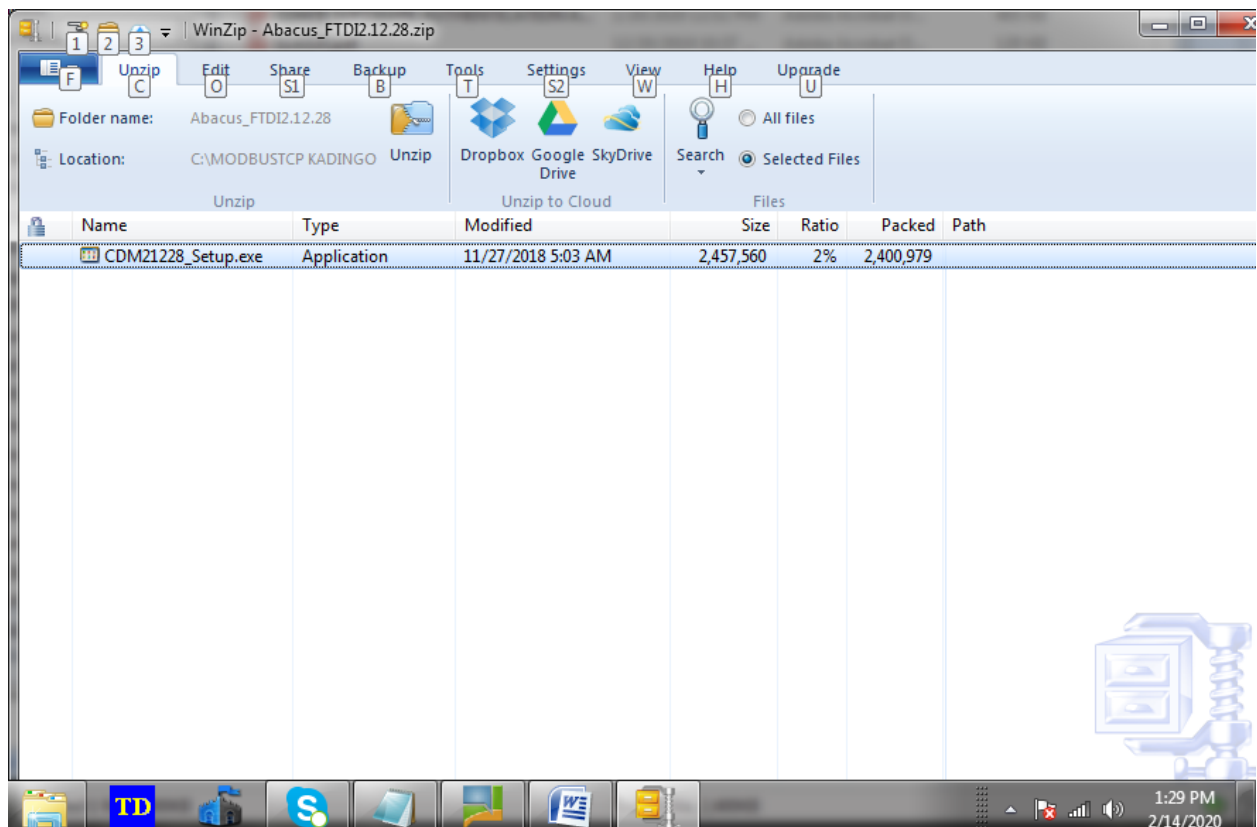


4. Proceed to the unzipped folder

Abacus_FTDI2.12.28

5. Run the Setup file

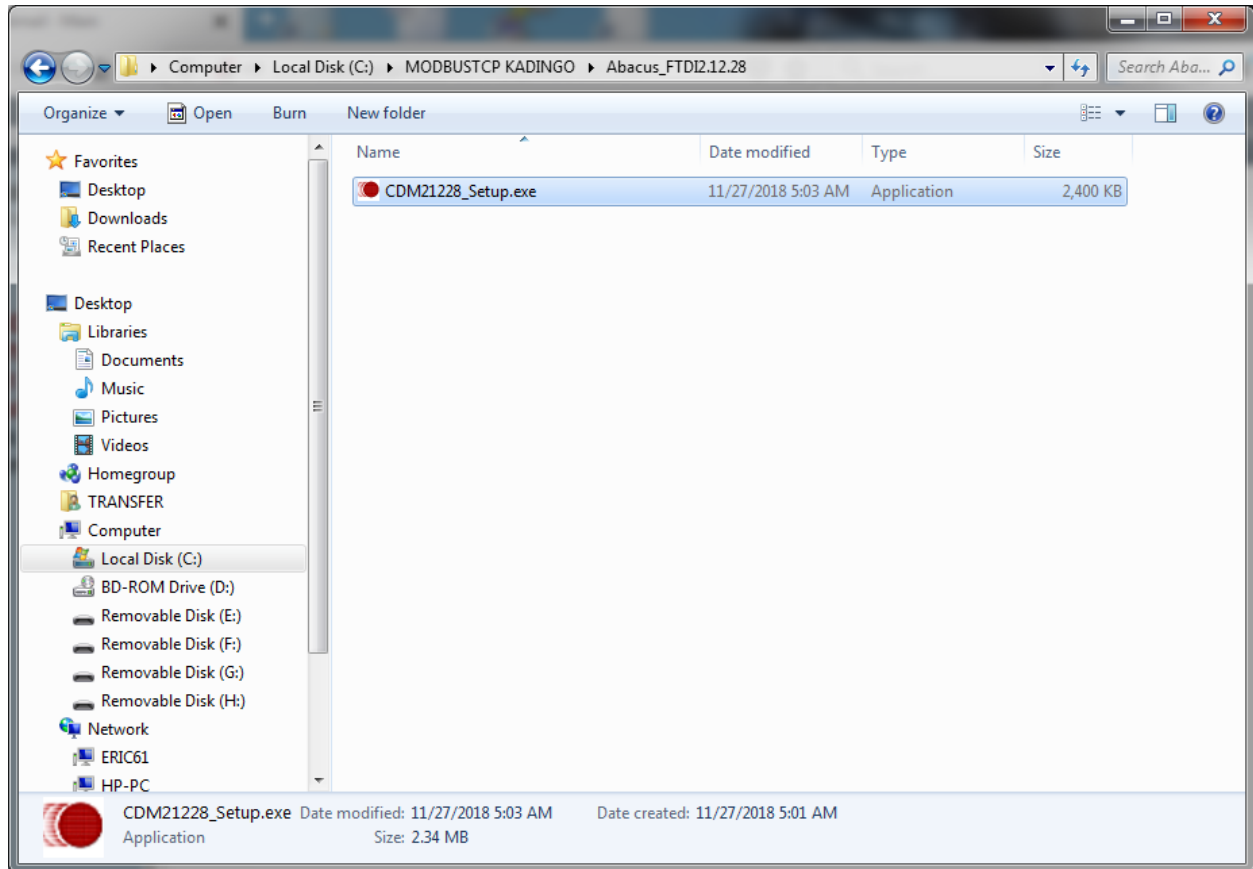

6. FTDI CDM DRIVERS

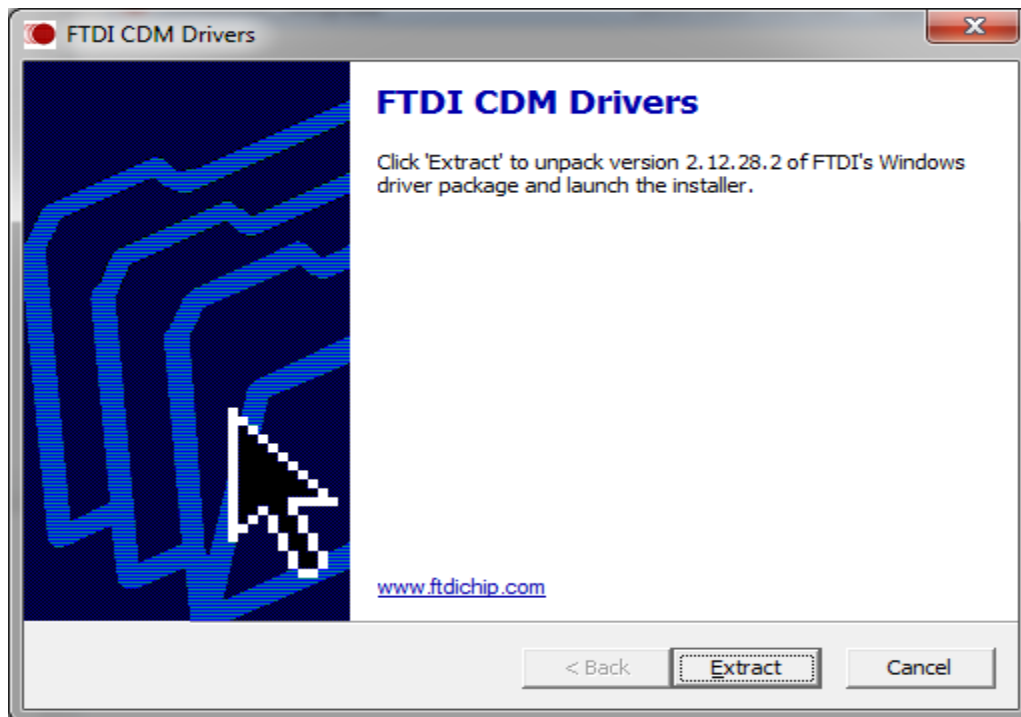

7. Successful download of FTDI drivers

